 
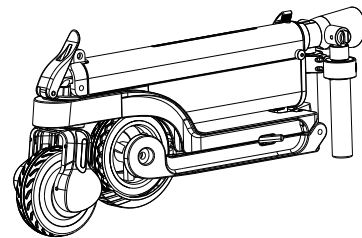 


**User Manual for
Folding E-scooter**

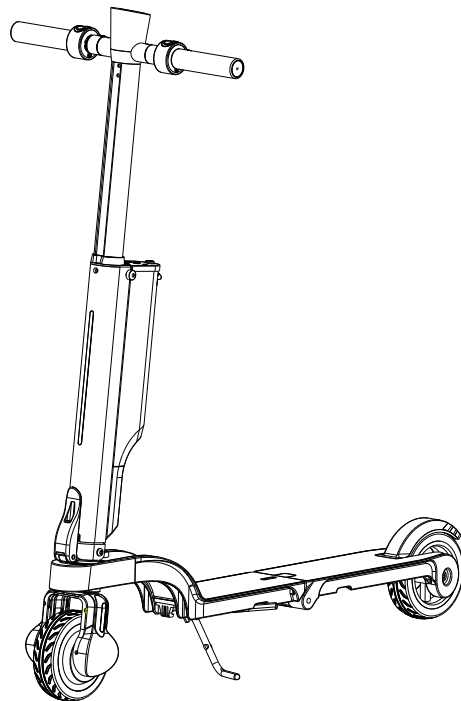

About the manual

- Congratulations on your purchase of the E-scooter.
- For your driving Safety, please read this user manual carefully before using and ensure to be able to ride the scooter under correct guidance. Learning all the safety warning and tips listed in this manual that will be helpful for you to better control the scooter.
- Please note “ warnings” and “ tips” in this manual particularly.
Warnings: Improper operation may result in personal injury.
Tips: Helpful advice & clues for the usage of E-scooter.
- Should you have any inquiries, please contact the supplier immediately.

Tips:

- A. Children below 14 years old shall be accompanied by an adult.
- B. The people without experience, poor ability to accept & physical coordination, should learn to ride with accompanies. Please read this manual carefully before you ride the electric scooter, make sure that you can riding with correct guide.
- C. No parents Accompanied, children are prohibited from cleaning and maintenance of the product.

WARNING!

IMPROPER USE OF THE SCOOTER AND/OR FAILURE TO READ THIS USER MANUAL MAY LEAD TO SERIOUS BODILY INJURY .SELLER WILL TAKE NO RESPONSIBILITY FOR ANY INJURIES CAUSED BY IMPROPER USE WITHOUT FOLLOWING THE MANUAL.

Content

1.Safety Notes.....	3-5
2.Product Introduction	6-10
3.How to ride.....	11-12
4.Battery Instruction.....	13-14
5.Parameter	15
6.Maintenance.....	15-16
7.Trouble shooting.....	16
8.Packing List	17
9.Product Quality Certificate	17
10.Product Warranty Card.....	18

1 Safety Notes

 
1.1 About safety

There's risk for any vehicle, including e-scooter. For your safety, please learn to ride safely and obey the local rules and enjoy the riding.

- Please check if the tire is damaged or the spare parts are tight before riding. Please contact local distributor for any unexpected situation.
- Please do not do anything that may harm other people or their properties with e-scooter.
- Any conversion of the e-scooter is prohibited as it will change its performance or damage the structure, which may bring serious injury.

1.2 Safety Precautions


Please note that you may lose balance, crash or fall down when you ride an e-scooter. To avoid injury, you should be familiar with this manual and keep the e-scooter in good condition.

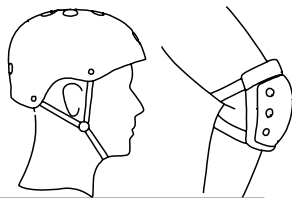

⚠ Safety measurements should be taken before riding, eg: wear sportswear, helmet, kneecap, elbow pads and so on.



 ⚠ DO NOT ride when it rains.

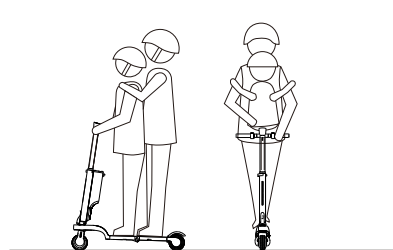

⚠ DO NOT ride with loading
DO NOT ride with two people or more, only for one rider.



 
⚠ People between 14 and 60 years old may use the product, pregnant is not allowed to ride the e-scooter.




⚠ Max Loading: 100 kg




⚠ DO NOT ride after drinking or taking medicine.

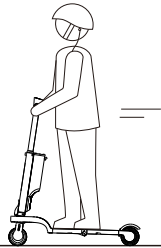

 
⚠ DO NOT call or listen to music when you ride the e-scooter.

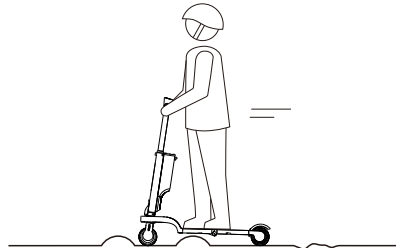

 ⚠ Be careful of the road with roadblock, sandstone, ponding, mud, wet, ice and snow, slope (angle >15°) stairs, dark area when you are riding.

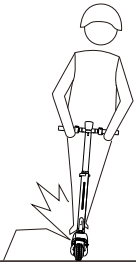

 
⚠ DO NOT use in dangerous area, where the exploding or catching fire may be caused by something inflammable, explosive or steam, liquid, dust and fiber.

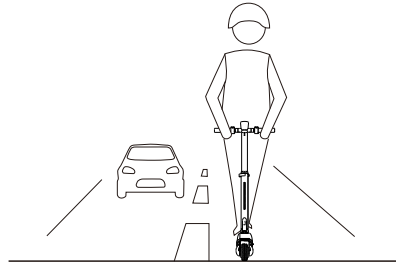


⚠ DO NOT ride on Vehicle road.

2 Production Introduction

  2.1 Overall View

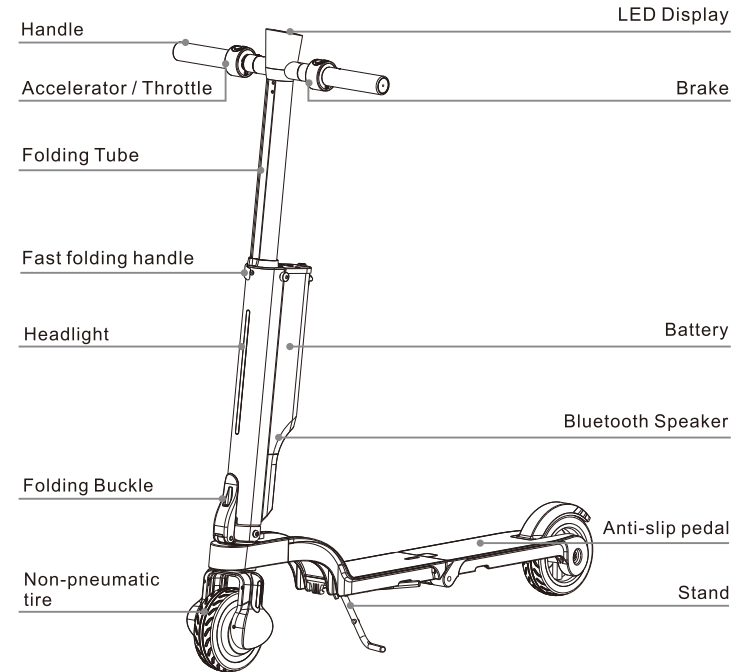

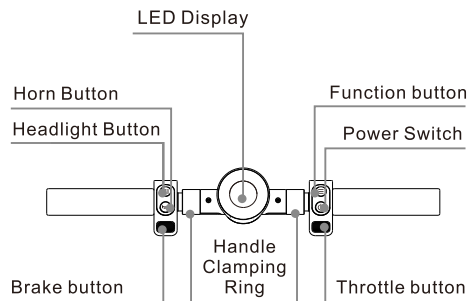

Instructions of Buttons

1. **Power Switch:** Long press the power button to turn on/off.

2. **Function key:**

A: Short press function key: Cycle to switch gears.

Beginner mode: Gear indicator **D** is not displayed.

Normal mode: Gear indicator **D** shows white.

Sports mode: Gear indicator **D** shows red.

 
 
3. **Accelerator:** Press the acceleration button to start and accelerate.

4. **Brake:** Hold the brake handle to brake. Lightly step on the rear fender to assist the brakes.

5. **Bluetooth:** Press the black button above the battery to turn on Bluetooth when power on .



USB port is on top of the battery(5V/2A).

6. **Cruise mode:** Keep the current speed for 6 seconds to enter the cruise mode; Exit the cruise mode when pressing accelerator again or brake.

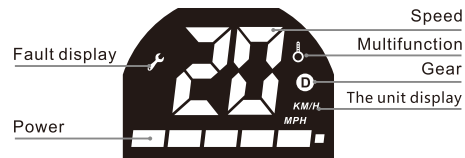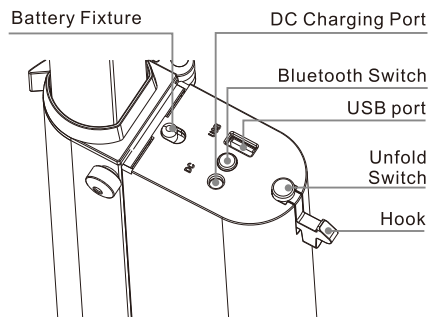


LED display

  
2.2 Unfold Steps

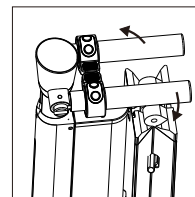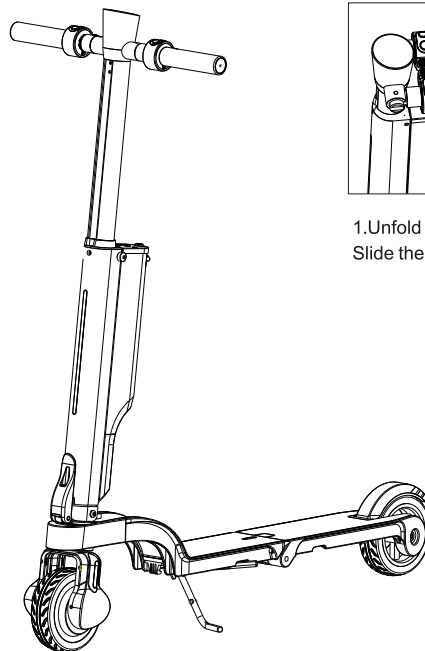

 
1. Unfold the handle, Slide the fixture inward.

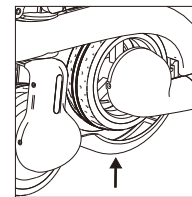

 
2. Open the pedal

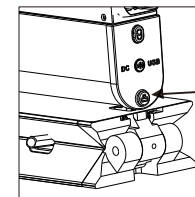

 3. Pull up the rod


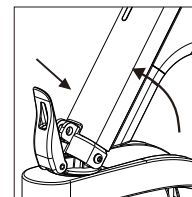


 4. Push stem upward fasten the folding clasp.

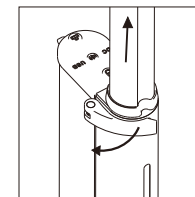


5. Release the fast folding handle, pull the rod up, lock the fast folding handle, open finished

  
2.3 Folding Steps

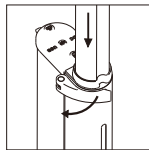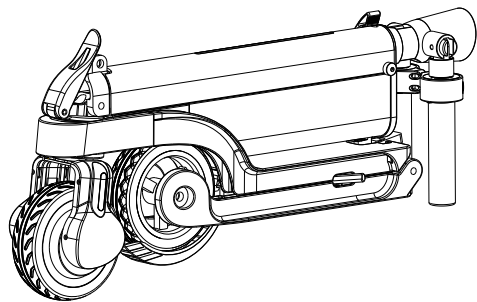

 
1. Open the fast folding handle , the rod shrinks downward

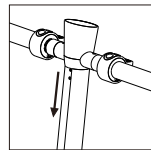

 
2. Lock the fast folding handle after the rod shrinks downward

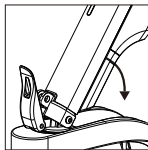

 
3. Loosen the floding clasp, push the stem downward.

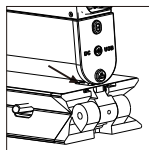

 4. Pressed into Slot on the pedal.

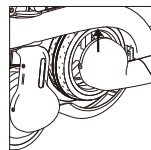


 5. The back pedal Buckle underneath the front ped

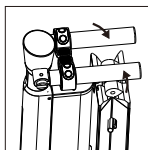


6. Slide fixture outward, Fold the handle.

 
2.4 How to uninstall / install the battery

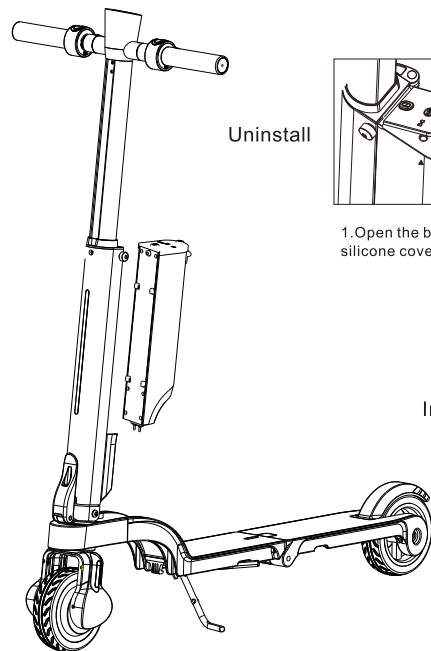


Uninstall

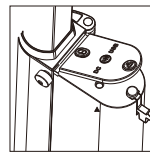 

 
1. Open the battery silicone cover

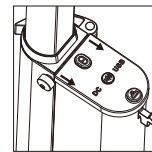

 2. Push the switch to the other end.

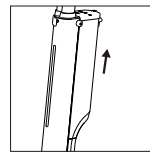


 3. Pull the battery up.

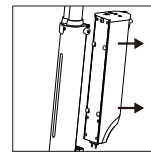


4. Take the battery out.

 
Install

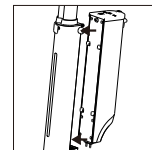

 1. Align the hole on the battery with that on the upright tube.

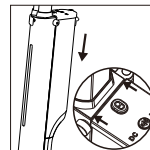


 2. Push the battery down till the switch is on the right position.

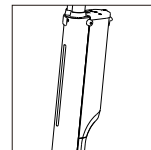


3. Battery is installed.

 3 how to ride the scooter

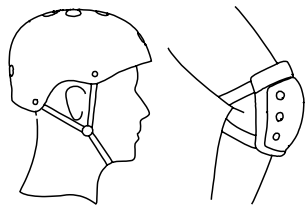

 Please wear helmet, kneecap, elbow-pad when you learn to ride the scooter.

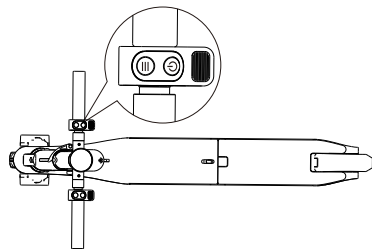


1 Press the POWER button for 2 seconds.




2 Put one foot on the pedal, Push off the ground with your strong leg.



 
3 Balance both feet on your scooter when you have enough momentum

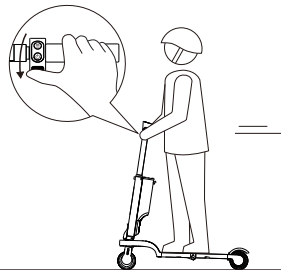

 4 Press the THROTTLE button slightly on your right hand to start and rotate the handle to turn

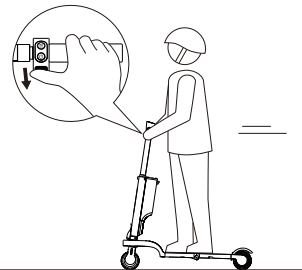

 5 Press the THROTTLE button to speed up. Do not ride too fast.

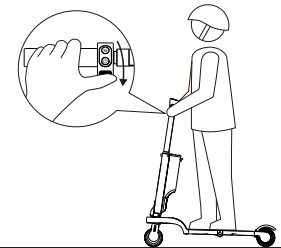

6 Press the BRAKE button on your left hand to slow down. Step on the fender with your left foot to assist braking. DO not brake hard.



7 When the scooter stops or run at a slow speed, you can get off.

4 Battery Instruction

The instruction shows how to charge and maintain the battery, some safety notices and the specification. Please use the battery properly according to this instruction to prolong the battery life and its performance.

4.1 Battery Parameters

Name	Parameter	Name	Parameter
Type	Li-ion battery	Working Temperature	0°C-35°C
Charging Time	4-6 hours	Charging Temperature	0°C-35°C
Voltage	25.2V	Store Time (-10°C-40°C)	3months (full charge)
Initial Volume	6Ah/7.8Ah	Store Humidity	5%~95%
Max Charging Voltage	29.4V	Max Charging Current	1.5A

4.2 Battery Safety

 
 
Please DO NOT use the battery under circumstances

- There's peculiar smell or overheat or leaking of any substance. Do not touch any substance leaking from the battery.
- Only trained professor can disassemble or maintain the battery.
- Do not let child or animal touch the battery. Disconnect the charger when you install the battery or try to ride. It's dangerous to use the scooter when the charger is connected.
- The battery should be used within the temperature range specified in the battery parameters in order to keep the scooter run with best efficiency.


- Li-ion battery is considered dangerous and allowed to be shipped with permission from the local authorities.
- The battery contains dangerous substances. DO NOT open the battery or put anything into the battery.
- ⚠ You should only use the provided charger to charge the e-scooter.
- Charging the li-ion battery that is over discharge is prohibited. The battery that is over discharge should be disposed.
- The li-ion battery can be used with the permission of local laws.

4.3 How to charge


- Open the cap on top of the battery case.
 - Make sure the charging port is clean and dry.
 - Connect the charger with the battery and the other end with power(100V-240V;50/60Hz), make sure the charging indicator is on.
 - When the indicator light on the charger changes, indicating that the charging process is normal, otherwise check if the line connection is good.
 - When the indicator on the charger has color change, it indicates that the battery has been filled to 99%, Please stop charging; long time over charge will affect the battery life.
- Cover the charging port with the anti-dust cap in case some metal may touch the charging port and bring short-circuit after charging finished.**

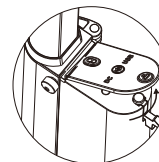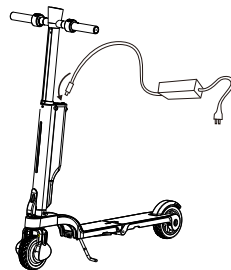

Open the battery silicone cover

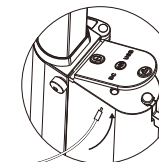 


Insert the charging plug

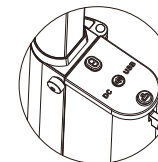 

Close the battery silicone cover after charging

 5 Specification

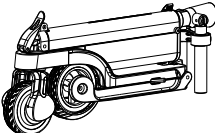Item X6	
	Scooter Specification
	Unfolded Size : 920*475*1070mm
	Folded Size : 675*130*305mm
	Height from pedal to ground : 136mm
Gross Weight :12kg	Net Weight : 10kg
Box Size :740*180*320mm	
Basic Information	
Max speed : 25km/h	Capacity : 25.2V/ 6Ah/7.8Ah
Mileage per charge : 10-25km	Motor Power : 24V/250W
Climbing angle : 15°	Max loading : 100kg
Charger Specification	
Model: Fy0632942000	
Input Voltage : 100-240Vac	Frequency : 50/60HZ
Output Voltage : 29.4V	Output Current : 1.5A
Working Temperature : 0°C-35°C	Store Temperature : -10°C-35°C

6 Maintenance

Maintenance considerations :

- Make sure the electric scooter charger and charging line are disconnected and ensure that the electric scooter is off.
- Wipe the shell with a soft cloth to clean the electric scooter. Please don't put more lubricating oil on bearing when you do the maintenance for it.

⚠ Warning

- It is forbidden to clean electric scooters by using water cannon or soaking in liquid. This will cause permanent damage of the electronic devices in the host.

Storage

- Please charge your electric scooter before storage, for preventing the battery from discharging too long time. Please ensure charge at least once every one months.
- If the storage environment temperature is lower than 0 °C, please don't charge electric scooter. Please put it in inside environment temperature (above 10 °C) and then charge, storage temperature is - 10 °C to 35 °C.
- Please keep the electric scooter in a suitable place indoor, dry and appropriate temperature. You can mask the electric scooter to prevent from the dust.

⚠ Warning

- In order to protect the user's safety, the user can not take apart the electric scooter, otherwise, the user will give up the maintenance warranty rights of the product automatically.

7 Trouble shooting

Please contact the sales office or the dealer with no hesitate for repair when the electric scooter fails to ride normally.

Description of adverse phenomena	Solution
unable starting up	Check to see if the battery is powered
can not charge	1.Check whether the plugboard has electricity ; 2.Check the charger whether connect AC plug (the light whether is on); 3.Check the plug of the charger and the charging port of the whole scooter have been inserted correctly.
No horn、no blue tooth signal	Check the bluetooth switch whether turn on.

8 Packing List

Electric scooter packing list :

E-scooter: 1PC

Charger: 1PC

Manual: 1PC

Screws & Wrench: 1set

Please contact us with no hesitate if there is any breakage or missing when you open package. We will replace it for you as soon as possible.

Have a nice day!

9 Product Quality Certificate

This product is qualified by passing QC inspection and allowed to be sold on the market.

The warranty card (It takes effect upon manufacturer's seal and passing with serial number) regular sales invoice is effective maintenance certificate. Please keep the warranty card properly.

Release date:

QC Qualified Seal:

10 Product Warranty Card

User Files

User Name		Sex		Age	
Address					
Telephone				Zip	
Purchase Site					
Purchase Price			Serial Number		
Commodity And Specifications			The User Signature		
Dealers Signature					

We shall provide warranty service due to non-artificial quality problems.

1. One year warranty to the main body including handlebar stem, Motor, Charger...
2. Battery is 6 months warranty period,
3. Plastic Decorative cover, rubble Handlebar ,rear wheel is not in the scope of warranty.
4. All of damage by man—made(open the housing,tear off the sticker,unnormally using),or losing this card we will not guarantee.